

# DCNM-IDESK | DCNM-IDESKVID Interpreter Desk

en Quick user guide



## Incoming pre-selected languages:

Use the selection buttons on the left to select the required language. The selected language will be highlighted.  
Press and hold down the button and rotate the rotary button on the right to change the language. If the language is set to none, nothing is displayed for that button. Pushing the rotary button selects the first language.

The relay status is indicated by:

- FLR** | no active interpreting. The floor audio is copied to the language;  
**+** | direct interpreting;  
**-** | relay interpreting;  
**--** | double relay interpreting.

The icon in front of the language indicates if a headset or headphones are connected.

## Loudspeaker volume control:

To control the volume of the loudspeaker.  
The loudspeaker is automatically muted when the booth is in use.

## Headphone control:

Tone and volume control of the headphones or headset.

## General information:

- The red circle indicates that the microphone is on. Blue indicates that it is off.
- Shows if the loudspeaker is active or muted.
- Shows the language of the loudspeaker.
- Shows the current time.
- Displays if audible beeps are enabled.

## Outgoing languages:

- Use the selection buttons on the right to select the outgoing language. The selected language will be highlighted.
- Press and hold down the button and rotate the rotary button on the right to change the language. If the language is set to none, nothing is displayed for that button (only for output B and C). Pushing the rotary button selects the first language.
- The icon indicates if the stem-microphone or the headset is used.
- The orange dot indicates that the language is engaged. A blinking orange dot indicates that multiple interpreters are active on the same output language.

## Recessed button:

To enable and disable the audible beeps.

## Rotary button:

- To pre-select the loudspeaker language. The loudspeaker can only be audible when the booth is not in use.
- To pre-select the input languages.
- To pre-select the outgoing languages B and/or C.
- To select the headphones/headset when it is connected.

## Assignable buttons:

- Switch between camera view and presentation view on the external monitor.
- To get an overview of the languages and their relay status.

## Floor /Auto Relay button:

Press the button to select Floor as input language. The Floor LED will be lit.  
The Auto Relay led will be lit when the input automatically switches to the Auto Relay language. The button can be used to toggle between Auto Relay language and Floor.

## Microphone button:

Press the button to activate the microphone.  
The LED is red when the microphone is on.  
The LED is off when the booth is in use and the microphone is off.  
The LED is green when the booth is not in use (microphone is off).

## Mute button:

Press and hold the button to temporary mute the microphone.

